
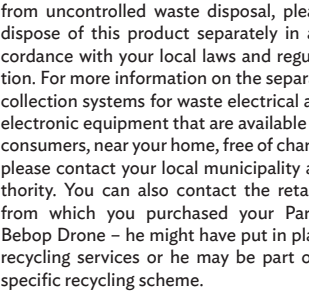


Parrot BEBOP DRONE

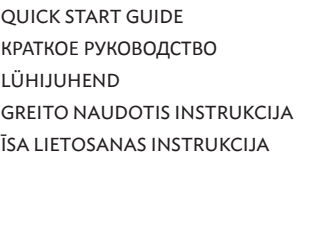

from uncontrolled waste disposal, please dispose of this product separately in accordance with your local laws and regulation. For more information on the separate collection systems for waste electrical and electronic equipment that are available for consumers, near your home, free of charge, please contact your local municipality authority. You can also contact the retailer from which you purchased your Parrot Bebop Drone – he might have put in place recycling services or he may be part of a specific recycling scheme.

Declaration of Conformity

Parrot SA, 174 quai de Jemmapes, 75010 Paris, France, declare under their sole responsibility that the product described in this user guide complies with technical standards EN 301489-17, EN300328, EN71-1, EN71-2, EN71-3, EN62115 following the provision of the Radio Equipment, Telecommunication Equipment directive (1999/5/EC R&TTE), and of the General Safety directive (2001/95/EC).

<http://www.parrot.com/ce/?bebop-drone>

Registered trademarks

Parrot, Parrot Bebop Drone are trademarks or registered trademarks of Parrot SA. App Store is a trademark of Apple Inc. Google Play is a trademark of Google Inc. Wi-Fi® is a registered trademark of Wi-Fi Alliance®. All other trademarks mentioned in this guide are protected and are the property of their respective owners.



которых проводятся мероприятия, места скопления животных. Не разрешается использовать Parrot вблизи аэродрома. Не допускается использование Parrot Bebop Drone для получения финансовой выгоды. Если вы хотите использовать Parrot Bebop Drone в многолюдной зоне или рядом с аэродромом, обратитесь в локальные органы гражданской авиации, чтобы получить соответствующие разрешения.

При использовании в помещении установите на Parrot Bebop Drone обтекатель для защиты при столкновении с различными предметами.

ВНИМАНИЕ: Воздушные винты Parrot Bebop Drone в полете могут ранить людей и повредить предметы. Не прикасайтесь к Parrot Bebop Drone в полете. Дождитесь полной остановки воздушных винтов, прежде чем брать в руки Parrot Bebop Drone.

Используйте только принадлежности, указанные производителем.

Попадание песка или пыли внутрь Parrot Bebop Drone может привести к необратимому выходу устройства из строя. Не используйте Parrot Bebop Drone при неблагоприятных погодных условиях (во время дождя, сильного ветра, снега) и при недостаточной видимости (ночью).

Держите Parrot Bebop Drone на удалении от высоковольтных линий электропередач, деревьев, зданий и любых других потенциально опасных зон. Не используйте устройство вблизи

QUICK START GUIDE

This guide will help you understand the basics of using the Parrot Bebop Drone. For more information, watch our videos and refer to the support section of our website www.parrot.com.

Charging the battery

- Select the adapter corresponding to your country and connect it to the charger.
- Connect the battery to the charger and then plug the charger into the main power supply. The charging time for the battery is approximately 1 hour.

Installing the battery

- Connect the battery to the Parrot Bebop Drone.
- Insert the battery into the appropriate compartment.
- Make sure that it is correctly secured by using the attachment mechanism.

Downloading the application

Connect to the App StoreSM or Google PlayTM and download the FreeFlight 3 app free of charge.

Connecting a smartphone

- Press the button located on the back of the Parrot Bebop Drone.
- Search for available Wi-Fi® networks on your smartphone:
 - If you are using an iPhone, go to

